

# E5CSL/E5CWL OMRON

## Temperature Controller

### EN Instruction Manual

Thank you for purchasing the OMRON E5CSL/E5CWL Temperature Controller. This manual describes the functions, performance, and application methods needed for optimum use of the product.

Please observe the following items when using the product.

- This product is designed for use by qualified personnel with a knowledge of electrical systems.
- Before using the product, thoroughly read and understand this manual to ensure correct use.
- Keep this manual in a safe location so that it is available for reference whenever required.

## OMRON CORPORATION

©All Rights Reserved

2113603-9B (CLD)

## Safety Precautions

### Key to Warning Symbols

**CAUTION** Indicates a potentially hazardous situation which, if not avoided, is likely to result in minor or moderate injury or property damage. Read this manual carefully before using the product.

### Warning Symbols

**CAUTION**

Do not touch the terminals while power is being supplied. Doing so may occasionally result in minor injury due to electric shock.

Do not allow pieces of metal, wire clippings, or fine metallic shavings or filings from installation to enter the product. Doing so may occasionally result in electric shock, fire, or malfunction.

Do not use the product where subject to flammable or explosive gas. Otherwise, minor injury from explosion may occasionally occur.

Never disassemble, modify, or repair the product or touch any of the internal parts. Minor electric shock, fire, or malfunction may occasionally occur.

If the input relays are used past their life expectancy, control fusing or burning may occasionally occur. Always consider the application conditions and use the output relays within their rated load and electrical life expectancy. The life expectancy of output relays varies considerably with the output load and switching conditions.

Tighten the terminal screws to between 0.7 N and 0.8 N·m. Loose screws may occasionally result in fire.

Set the parameters of the product so that they are suitable for the system being controlled. If they are not suitable, unexpected operation may occasionally result in property damage or accidents.

A malfunction in the Temperature Controller may occasionally make control operations impossible or prevent alarm output, resulting in property damage in the event of malfunction of the Temperature Controller. Take appropriate safety measures, such as installing a monitoring device on a separate line.

### Suitability for Use

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of the products in the customer's application or use of the product. Take all necessary steps to determine the suitability of the product for the systems, machines, and equipment with which it will be used.

Know and observe all problems of use applicable to this product.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT SYSTEM.

See also product catalog for Warranty and Limitation of Liability.

## Precautions for Safe Use

- Be sure to observe the following precautions to prevent operation failure, malfunction, or adverse effects on the performance and functions of the product. Not doing so may occasionally result in unexpected events.
- (1) The product is designed for indoor use only. Do not use the product outdoors or in any of the following locations.
- Places directly subject to heat radiated from heating equipment.
  - Places subject to splashing liquid or oil or atmosphere.
  - Places subject to direct sunlight.
  - Places subject to dust or corrosive gas (in particular, sulfide gas and ammonia gas).
  - Places subject to intense temperature change.
  - Places subject to icing and condensation.
  - Places subject to vibration and large shocks.
- (2) Use terminals within the rated temperature and humidity ranges.
- Provide forced cooling if required.
- (3) To allow heat to escape, do not block the area around the product.
- Do not block the ventilation holes on the product.
- (4) Be sure to wire properly with correct polarity of terminals.
- (5) Use specified size (M3.5, width 7.2 mm or less) crimped terminals for wiring. To connect bare wires to the terminal block, use copper braided or solid wires with a rated temperature of over 70°C and a gauge of AWG24 to AWG14 (equal to a cross-sectional area of 0.20 to 2.08 mm<sup>2</sup>). The stripping length is 5 to 6 mm. Up to two wires of same size and type, or two crimped terminals can be inserted into a single terminal.
- (6) Do not wire the terminals which are not used.
- (7) Allow as much space as possible between the controller and devices that generate a powerful high-frequency magnetic field.
- Separate the high-voltage or large-current power lines from other lines, and avoid parallel or common wiring with the power lines when you are wiring to the terminals.
- (8) Use this product within the rated load and power supply.
- (9) Make sure that the rated voltage is attained within two seconds of turning ON the power using a switch or relay contact. If the voltage is applied gradually, the power may not rest or output malfunctions may occur.
- (10) Make sure that the Controller has 30 minutes or more to warm up after turning ON the power before starting actual control operations to ensure the correct temperature display.
- (11) A switch or circuit breaker should be provided close to the unit.
- The switch or circuit breaker should be within easy reach of the operator, and must be marked as a disconnecting means for this unit.
- (12) Do not use paint thinner or similar chemical to clean with. Use standard grade alcohol.
- (13) Design system with correct polarity, also considering the 2 second of delay that the controller's output is to be set after power ON.
- (14) The output may turn OFF when shifting to certain levels. Take this into consideration when performing control.
- (15) The number of non-volatile memory write operations is limited.

## Specifications

Power supply voltage	100 to 240 VAC, 50/60 Hz
Operating voltage range	85% to 110% of the rated voltage
Power consumption	Approx. 3.5 VA
Sensor type	Thermocouple: K, J, T, R, or S (JIS C 1602-1995 and IEC 60584-1) Platinum resistance thermometer: Pt100 (JIS C 1604-1997 and IEC 60751)
Indication accuracy (ambient temperature 23°C)	(±0.5% of indication value or ±1°C, whichever is greater) ±1 digit max. R: 5 thermocouple at 200°C or less, ±3°C at 1 digit max. K, T: thermocouple at 100°C or less, ±2°C at 1 digit max.
Control output	Relay output: 250 VAC, 3 A (resistive load) Voltage output (for driving SSR): 12 VDC +25%~15%, 21 mA
Alarm output	Relay output: 250 VAC, 1 A (resistive load)
Control method	ON/OFF or 2-PID control
Electrical life of relay	100,000 operations
Sampling period	250 ms
Malfunction vibration	10 to 55 Hz, 20 ms <sup>2</sup> to 10 min each in X, Y and Z directions
Vibration resistance	10 to 55 Hz, 20 ms <sup>2</sup> to 2 s each in X, Y and Z directions
Shock resistance	100 ms <sup>2</sup> 3 times each in X, Y, and Z directions
Shock resistance	300 ms <sup>2</sup> 3 times each in X, Y, and Z directions
Ambient temperature	-10 to 55°C (with no freezing or condensation)
Ambient humidity	25% to 85%
Storage temperature	-25 to 85°C (with no freezing or condensation)
Altitude	2,000 m max.
Recommended use	T2A, 250V, time-lag, low-breaking capacity
Weight	Approx. 100 g (Controller only)
Degree of protection	Front panel: IP50, Rear case: IP20, Terminal section: IP00
Installation environment	Installation category: II, pollution degree 2 (as per IEC 61010-1)
Memory protection	Non-volatile memory (number of write operations: 100,000)

## Wiring


### Model Number Legends

Models with Single Display Models with Dual Display

E5CSL: E5CWL:


Control output	
R	Relay output: 250 VAC, 3 A
Q	Voltage output (for driving SSR): 12 VDC, 21 mA
Alarm (E5CWL only)	
1	Relay output: 250 VAC, 1 A (resistive load)
Sensor type	
TC	Thermocouple (K, J, T, R, or S)
P	Platinum resistance thermometer (Pt100)

### Front Panel Part Names and Functions

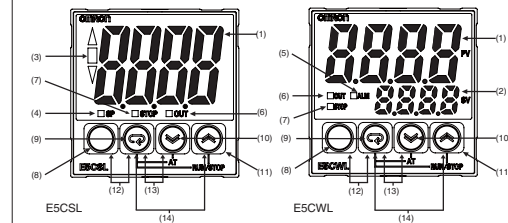


- (1) Display No. 1  
(2) Display No. 2  
(3) Deviation Indicators  
(4) SP  
(5) ALM  
(6) OUT  
(7) STOP  
(8)   
(9)
- Displays the process value (PV) or parameter. For the E5CSL, the set point or parameter setting is also displayed.
- Displays the set point (SP) or parameter setting.
- Show the relation between the process value and the set point.
- ▲ Lit: The process value is more than 5°C/F higher than the set point.  
▼ Lit: The process value is more than 5°C/F lower than the set point.
- Lit: The process value within 5°C/F of the set point.
- The relevant deviation indicator will flash during autotuning.
- Li while the set point is displayed on display No. 1 (E5CSL only).  
Li while the alarm is ON. Not lit while the alarm is OFF.  
Li while the control output is ON. Not lit while the control output is OFF.
- Not lit during operation. Li while operation is stopped.
- Level Key: Changes the setting level.
- Mode Key: Changes the parameter within the setting level.

### Installation (mm)

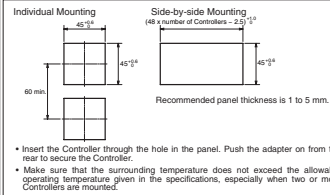


### Connections

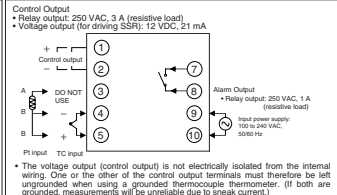

## Operation Menu

### Parameter Operations

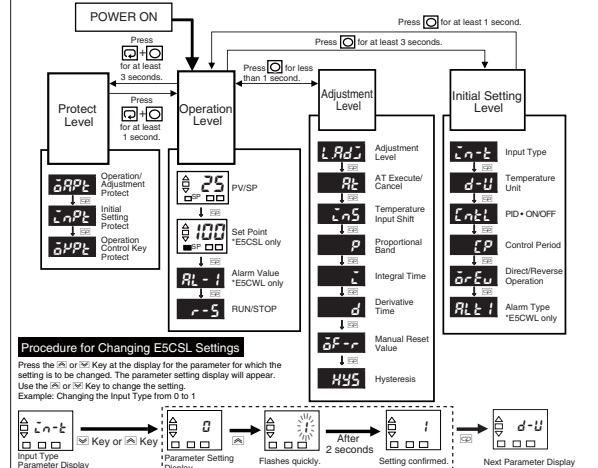

### Parameter Tables


Step 1 Initial Setting Level: Used to set basic specifications.				
Display	Parameter name	Description	Setting/monitoring range	Default
	Input Type	Set the input sensor type.	Refer to table on the right.	0 or 8
	Temperature Unit	Set the unit for temperature input to Celsius (°C) or Fahrenheit (°F).	(°C)/(°F)	°C
	PID + ON/OFF	Set either 2-PID control or ON/OFF control.	ON/OFF	ON/OFF
	Control Period	Set the time-proportional control period for the control output. (Displayed only when PID control is selected.)	0.5, 1 to 99	20 or 2 (s)
	Direct/Reverse Operation	Set either reverse operation (heating control) or direct operation (cooling control).	ON (reverse control) OFF (direct control)	ON (reverse control)
	Alarm Type	Set the alarm type. "E5CWL" only.	Refer to table on the right.	(Deviation alarm type)
Step 2 Operation Level: Used to monitor the process value and to set the set point, alarm value, etc.				
Display	Parameter name	Description	Setting/monitoring range	Default
	PV/SP	Monitor the process value and set the set point.	—	SV: 0 (°C)
	Alarm Value	Set the alarm value. The location of the decimal point depends on the input type. "E5CWL" only.	-1999 to 9999	0 (°C)
	RUN/STOP	Start and stop control operation. <sup>1)</sup>	-1 to 5	RUN
Step 3 Adjustment Level: Used to tune parameters and set control parameters.				
Display	Parameter name	Description	Setting/monitoring range	Default
	Adjustment Level	This display indicates that you have moved to Adjustment Level.	—	—
	AT Execute/Cancel	Starts and stops autotuning. (Displayed only when PID control is selected.) <sup>1)</sup>	OFF/ON	OFF
	Temperature Input Shift	Set a compensation value for the temperature input in increments of 0.1°C or 0.1°F.	-1999 to 9999	0.0 (°C)
	Proportional Band	Set the proportional band in increments of 1 s. (Displayed only when PID control is selected.)	0 to 9999	8.0 (°C)
	Integral Time	Set the integral time in increments of 1 s. (Displayed only when PID control is selected.)	0 to 9999	233 (s)
	Derivative Time	Set the derivative time in increments of 1 s. (Displayed only when PID control is selected.)	0 to 9999	40 (s)
	Manual Reset Value	Set the manipulated value to use for P or PD control (I = 0). The offset will be canceled.	0.0 to 100.0	50.0 (°C)
	Hysteresis	Set the hysteresis to use to achieve stable operation when switching the control output ON/OFF during ON/OFF control. (Displayed only when ON/OFF control is selected.)	0 to 9999	1.0 (°C)

\*1: Displayed only when Operation Control Key Protection is set to 4.  
\*2: The setting cannot be changed during autotuning. Autotuning will be stopped if you move to Initial Setting Level or stop control operation.  
\*3: Displays during Autotuning.  
E5CWL: The current deviation indicator will flash.  
E5CWL: The AT Execute/Cancel characters on display No. 1 and the PV/SP characters on display No. 2 will flash.

### Alarms

Setting	Alarm type	Positive alarm value (X)	Negative alarm value (X)	Deviation/absolute value alarm
0	No alarm	Output OFF	Output OFF	Deviation alarm
1	Deviation upper/lower limit	ON/OFF	Always ON	Deviation alarm
2	Deviation upper limit	ON/OFF	Always ON	Deviation alarm
3	Deviation lower limit	ON/OFF	Always ON	Deviation alarm
4	Deviation upper/lower range	ON/OFF	Always OFF	Deviation alarm
5	Deviation upper/lower limit standby sequence ON	ON/OFF	Always OFF	Deviation alarm
6	Deviation upper limit standby sequence ON	ON/OFF	Always OFF	Deviation alarm
7	Deviation lower limit standby sequence ON	ON/OFF	Always OFF	Deviation alarm
8	Absolute value upper limit	ON/OFF	Always OFF	Absolute value alarm
9	Absolute value lower limit	ON/OFF	Always OFF	Absolute value alarm
10	Absolute value upper limit standby sequence ON	ON/OFF	Always OFF	Absolute value alarm
11	Absolute value lower limit standby sequence ON	ON/OFF	Always OFF	Absolute value alarm
12	Do not set.	ON/OFF	Always OFF	Absolute value alarm

The default alarm type is 2.

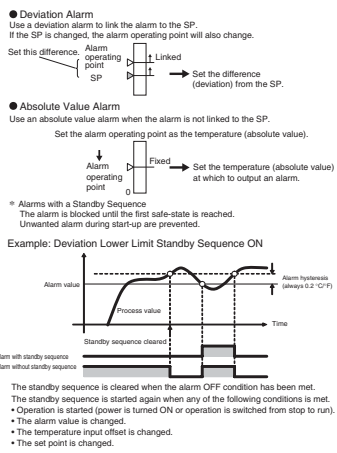

### Input type: Thermocouple

Input	Setting	Setting range (°C)	Setting range (°F)
K	0	-200 to 1300	-300 to 2300
	1	-20.0 to 500.0	0.0 to 900.0
J	2	-100 to 850	-100 to 1500
	3	-20.0 to 400.0	0.0 to 750.0
T	4	-20.0 to 400	-300 to 700
	5	-199.9 to 400.0	-199.9 to 700.0
R	6	0 to 1700	0 to 3000
S	7	0 to 1700	0 to 3000

The default input type is 0.

### Input type: Platinum Resistance Thermometer

Input	Setting	Setting range (°C)	Setting range (°F)
Pt100	8	-200 to 850	-300 to 1500
	9	-199.9 to 500.0	-199.9 to 900.0

The default input type is 8.

### Troubleshooting

Display	Meaning	Action
SErr (S.ERR)	Input error	Check the wiring of inputs, disconnections, short circuits and load.
E111	RAM memory error	Turn the power OFF then back ON again.*2
E112SDA (E111) (SDM)	Non-volatile memory error	Press the  and  keys for at least 3 seconds to initialize the settings and clear the non-volatile memory error.*2

• The control is displayed only when the process value and set point are displayed.  
• If the SErr, the alarm output will be processed for a high temperature error.  
• If the input value exceeds the display limit (1999 to 9999) but it is still within the control range, cccc will be displayed. Values under -1999.  
• Under these conditions, the control output and alarm output will operate normally.

### Protection

Operation/Adjustment Protection	Setting
Level	0 1 2 3
Process value	0 0 0 0
PV/SP	0 0 0 0
Others (Alarm Value)	0 0 0 0
Adjustment Level	0 0 0 0

Default: 0  
0: Can be displayed and changed.  
1: Can only be displayed.  
2: Display or changing to another level is not possible.

### Initial Setting Protection

Level	Setting
Initial Setting Level	Do not set. 0 2

Default: 1  
0: Can be displayed and changed.  
1: Display or changing to another level is not possible.

Operation Control	Setting
AT Execute/Cancel (E111)	0 0 0 0
RUN/STOP (E111)	0 0 0 0

Default: 0  
0: Operation control keys are enabled but operation control using parameters is disabled.  
1: Operation control keys are disabled but operation control using parameters is enabled.  
2: Operation control keys and operation control using parameters are disabled.

## Conformance to EN/IEC Standards

This is a class A product. In residential areas it may cause radio interference, in which case the user may be required to take adequate measures to reduce interference.

OMRON EUROPE B.V.  
Wegalaan 67-69, NL-2132 JD Hoofddorp The Netherlands  
Phone 31-2356-81300  
FAX 31-2356-91-388  
OMRON ELECTRONICS LLC  
One Commerce Drive Schaumburg, IL 60173-5302 U.S.A  
Phone 1-847-843-7900  
FAX 1-847-843-7787  
OMRON ASIA PACIFIC PTE. LTD.  
No. 438A Alexandra Road # 05-05/08 (Lobby 2),  
Alexandra Technopark, Singapore 119957  
Phone 65-6835-3011  
FAX 65-6835-2711  
OMRON Corporation  
Shikogi Horikawa, Shimogyo-ku, Kyoto 600-8530 JAPAN

