
Simple Fiber Amplifiers

E3X-SD/NA Series



Simplicity and High Performance


The Series now includes models with digital displays and direct key setting.

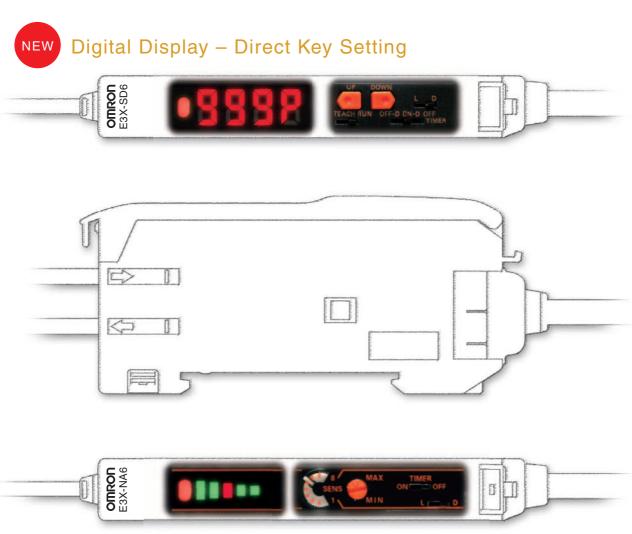

Bar Display - Manual Setting

Simplicity and High Performance




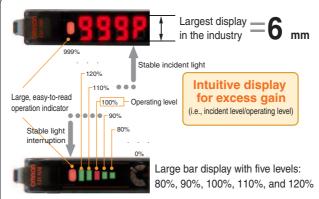


Immediately determine operation and amount of light with a simple, bright display.

With the E3X-SD, settings and management can be performed reliably using the digital display ranging from 0% to 999% (10 times), and with the E3X-NA, the same can be performed intuitively using the large 5-level bar display.

Wire-saving Connector to Reduce Work and Stock Management

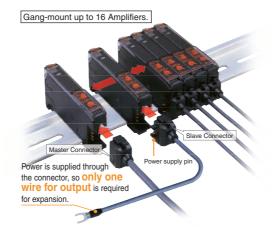


- Large reduction in wiring work
- Simple management:
 No distinction between master and slaves

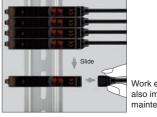

Work efficiency is also improved during maintenance.

3

General-purpose Performance for Simple Use

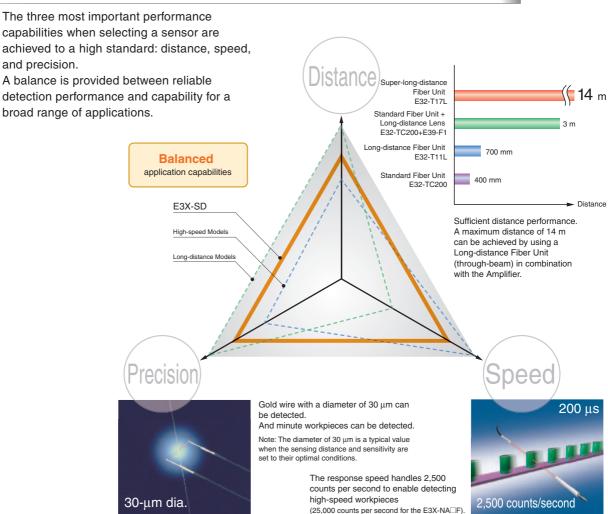

Optical Communications to Prevent Mutual Interference for Up to Five Amplifiers

Optical communications is used between Amplifiers.


Interference is reliably prevented for up to five Amplifiers by mutually staggering the light emission timing (except for the E3X-NA \square F).



Selecting Fiber Amplifiers

Simple

For simple operation: Select a Simple Fiber Amplifier.

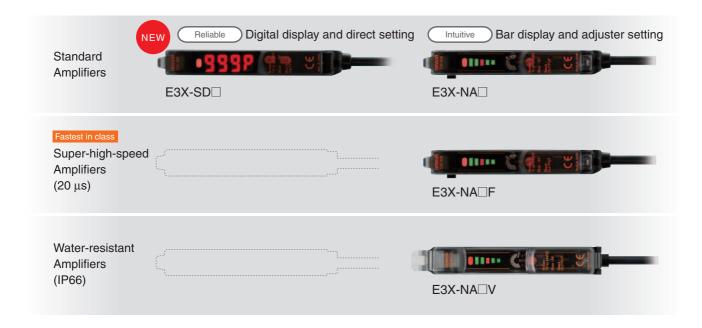

All in One For multifunctional capability: Select an Advanced Fiber Amplifier.





Simple Fiber Amplifier E3X-SD/-NA

The Standard for Fiber Amplifiers with Simple Operation and High Performance

- Operation so simple that essentially anyone can use the amplifier right way.
- Immediately determine operation and amount of light with a simple, bright display.
- General-purpose capabilities to simply handle a broad range of applications.



CE

Ordering Information

Amplifier Units

Digital Display and Direct Key Setting

Item	Annoaronoo	Connection	Ratings and	Model	
item	Appearance	method	_		PNP output
Standard models	Pre-wired			E3X-SD11	E3X-SD41
		Wire-saving connector		E3X-SD6	E3X-SD8

Bar Display and Adjuster Setting

Item	Appearance	Connection	Ratings and	Model	
iteiii	Appearance	method	Specifications	NPN output	PNP output
Standard models		Pre-wired		E3X-NA11	E3X-NA41
		Wire-saving connector		E3X-NA6	E3X-NA8
High-speed detection models		Pre-wired	Response time: 20 μs	E3X-NA11F	E3X-NA41F
Water-resistant		Pre-wired	Degree of protection:	E3X-NA11V	E3X-NA41V
models		Connector (M8)	IP66	E3X-NA14V	E3X-NA44V

Amplifier Unit Connectors (Order Separately) Note: Stickers for Connectors are included as accessories.

Item	Appearance	Cable length	No. of conductors	Model
Master Connector		2 m	3	E3X-CN11
Slave Connector		2 111	1	E3X-CN12

Combining Amplifier Units and Connectors

(Basically, Amplifier Units and Connectors are sold separately)

Refer to the following tables when placing an order.

Amplifier Units				
Type NPN PNP				
Standard models	E3X-SD6	E3X-SD8		
	E3X-NA6	E3X-NA8		

Applicable Connectors (Order Separately)

Master Connector Slave Connector

E3X-CN11 (3-wire) E3X-CN12 (1-wire)

When Using 5 Amplifier Units

5 Amplifier Units

1 Master Connector + 4 Slave Connectors

Sensor I/O Connectors (Order Separately)

Size	Cable specifications	Appearance		Cab	le type	Model
		Straight		2 m		XS3F-M421-402-A
M8	Standard cable	connector		5 m	Four- conductor	XS3F-M421-405-A
IVIO	Standard Cable	L-shaped		2 m	cable	XS3F-M422-402-A
		connector		5 m		XS3F-M422-405-A

Accessories (Order Separately)

Mounting Brackets

Appearance	Applicable models	Model	Quantity
	E3X-SD□ E3X-NA□	E39-L143	
	E3X-NA□F		1
	E3X-NA□V	E39-L148	

End Plate

Appearance	Model	Quantity
5	PFP-M	1

Ratings and Specifications

Amplifier Units

		Digital display and direct key setting	Bar display and adjuster setting			
	Туре	Standard models	Standard models	High-speed detection models	Water-resistant models	
Item	Model	E3X-SD□	E3X-NA□	E3X-NA□F	E3X-NA□V	
Light source	e (wavelength)	Red LED (620 nm)	Red LED (680 nm)			
Power supp	ly voltage	12 to 24 VDC ±10%, ripple (p-p): 10% max.	1			
Current con	sumption	960 mW max. (Power supply: 24 V, Current consumption: 40 mA max.)	35 mA max.			
Control out	put	Open-collector output (NPN or PNP) Load power supply: 26.4 V max., Load current: 50 Light-ON/Dark-ON mode selector) mA max. (Residual voltage: 1.5 V max.) (*1)			
Response time Operate or reset: 200 µs max. (*2)			Operate: 20 μs max. Reset: 30 μs max.	Operate or reset: 200 μs max. (*2)		
Sensitivity a	usitivity adjustment UP/DOWN direct key setting, teaching 8-turn se		8-turn sensitivity adjuster (v	vith indicator)		
Protection of	circuits	Power supply reverse polarity protection, output short-circuit protection, output reverse polarity protection (*3)				
Timer functi	ion	ON/OFF-delay timer: 10 ms (each fixed) OFF-delay timer: 40 ms (fixed)		red)		
Mutual inter prevention	ference	Up to 5 Amplifiers (optically synchronized)		None	Up to 5 Amplifiers (optically synchronized)	
Ambient illu	ımination	Receiver side Incandescent lamp: 10,000 lux max. Sunlight: 20,000 lux max.				
Ambient ten	nperature	Groups of 4 to 11 Amplifiers: -25°C	to 55°C to 50°C to 45°C nsation)			
Ambient hu	midity range	Operating and storage: 35% to 85% (with no cond	lensation)			
Insulation re	esistance	20 MΩ. min. (at 500 VDC)				
Dielectric st	rength	1,000 VAC at 50/60 Hz for 1 minute (*4)				
Vibration re	sistance	Destruction: 10 to 55 Hz with a 1.5-mm double am	plitude for 2 hrs each in X, \	and Z directions		
Shock resis	tance	Destruction: 500 m/s ² , for 3 times each in X, Y and	d Z directions			
Degree of protection IEC 60529 IP50 (with Protective Cover attached)			IEC 60529 IP66 (with Protective Cover attached)			
Connection	method	Pre-wired (standard cable length: 2 m), or connector				
Weight (pac	ked state)	Pre-wired model: Approx. 100 g, Model with conne	ector: Approx. 55 g (*5)			
Material	Case	Polybutylene terephthalate (PBT)				
Material	Cover	Polycarbonate			Polyethersulfone (PES)	
Accessories	3	Instruction manual			1	
*1 For the E2	X-NA recidual	voltage is 1 V max				

Amplifier Unit Connectors


Item	Model	E3X-CN11	E3X-CN12			
Rated current 2.5 A						
Rated vol	oltage 50 V					
Contact re	esistance	20 mΩ max. (20 mVDC max., 100 mA max.) (The above figure is for connection to the Amplifier Unit and the adjacent Connector. It does not include the conductor resistance of the cable.)				
Number o	of insertions	Destruction: 50 times (for connection to the Amplifier Unit and the a	djacent Connector)			
Material	Housing	Polybutylene terephthalate (PBT)				
Material	Contact Phosphor bronze/gold-plated nickel					
Weight (p	acked state)	Approx. 55 g	Approx. 25 g			


^{*1.} For the E3X-NA, residual voltage is 1 V max.
*2. When there are 8 or more E3X-NA Amplifiers mounted side-by-side, the response time will be 350 μs max.
*3. The E3X-NA does not have output reverse polarity prevention.
*4. Water-resistant models and models with connectors have a dielectric strength of 500 VAC.
*5. Add 10 g for water-resistant models.

Fiber Unit Overview


No snagging, no breaking: Right-angle (L-shaped) Models



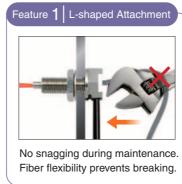

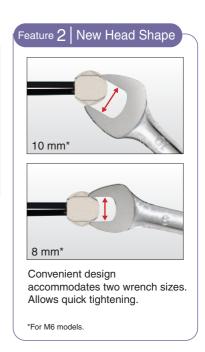




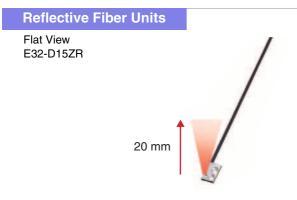


Size: $15 \times 10 \times 3 \text{ mm}$

Feature No Breaking

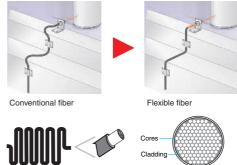

A large number of ultrafine cores are all surrounded by cladding. As a result, the fiber is flexible and can be bent without significantly reducing the light intensity. This helps solve problems, such as fiber being broken by getting caught on other objects.

Through-beam Fiber Units

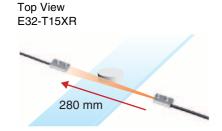

Size: $15 \times 8 \times 3$ mm





Sensing Distance

Through-beam Models

(Unit: mm)

		Model	E3X-SD□ E3X-NA□	E3X-NA□F
Гуре			Standard models	High-speed detection models
		E32-T11R/E32-T12R/E32-T15XR/E32-TC200BR (B4R)	280	80
	Flavible	E32-T14LR/E32-T15YR/E32-T15ZR	110	33
	Flexible (new standard)	E32-T21R/E32-T22R/E32-T25XR/	60	18
	(new standard)	E32-TC200FR (F4R)	60	10
		E32-T24R/E32-T25YR/E32-T25ZR	30	9
		E32-TC200/E32-T12/E32-T15X/E32-TC200B (B4)	400	120
Standard		E32-T14L/E32-T15Y/E32-T15Z	240	70
models	Standard	E32-TC200A	360	100
		E32-TC200E/E32-T22/E32-T222/E32-T25X/E32-TC200F (F4)	100	30
		E32-T24/E32-T25Y/E32-T25Z	90	27
		E32-T11/E32-T12B/E32-T15XB	360	100
	Break resistant	E32-T21/E32-T221B/E32-T22B	100	30
		E32-T25XB	75	20
	Fluorine coating	E32-T11U	360	100
	_	E32-T17L	14000	4200
		E32-TC200 + E39-F1	3000	900
		E32-T11R + E39-F1	2100	630
		E32-T11 + E39-F1	2000	600
	Long distance, high power	E32-T14	1800	540
		E32-T11L/E32-T12L	700	210
		E32-T11L + E39-F2	500	150
		E32-T11R + E39-F2	220	65
		E32-T11 + E39-F2	360	100
		E32-T21L/E32-T22L	200	60
	Ultracompact, ultrafine sleeve	E32-T223R	60	18
Special- beam models		E32-T33-S5	20	6
		E32-T333-S5	5	1.5
		E32-T334-S5	2.5	0.8
	Fine beam	E32-T22S	1000	300
	(narrow vision field)	E32-T24S	700	210
	(Harrow vision ficia)	E32-T16PR	450	130
		E32-T16P	600	180
		E32-T16JR	390	110
		E32-T16J	520	150
	Area sensing	E32-T160	690	200
		E32-T16W1	920	270
		E32-T16W	1500	450
		E32-N21	300	90
		E32-T51	400	120
			130	35
		E32-T54 E32-T81R-S	180	50
	Heat resistant	E32-T61-S + E39-F2	390	130
	neat resistant	E32-T61-S + E39-F2	3000	900
		E32-T84S-S	700	210
		E32-T61-S	300	90
Environment		E32-T11F E32-T12F	1050 1600	380 480
resistive models	Chemical			
moucis	resistant	E32-T14F	200	60
		E32-T51F	700	200
		E32-T81F-S	350	100
		E32-T51V	100	
	Vacuum	E32-T51V + E39-F1V	600	
	resistant	E32-T54V	65	
	resistant	E32-T54V + E39-F1V	390	


For information on Fiber Units, refer to the E32 Series Fiber Sensor Best Selection (Cat. No. E354).

Reflective Models (Unit: mm)


		Model	E3X-SD□ E3X-NA□	E3X-NA□F
Туре			Standard models	High-speed detection models
		E32-D11R/E32-D12R/E32-D15XR/E32-DC200BR (B4R)	90	30
		E32-D14LR	16	5
		E32-D15YR/E32-D15ZR	20	5
Flexible (new standard	Flexible (new standard)	E32-D211R/E32-D21R/E32-D22R/E32-D25XR/ E32-DC200FR (F4R)	15	5
		E32-D24R	7	2.3
		E32-D25YR/E32-D25ZR	4	1.2
		E32-DC200/E32-D15X/E32-DC200B (B4)	150	50
		, ,		
		E32-D12	120	40
Standard		E32-D14L	40	13
models	Standard	E32-D15Y/E32-D15Z	50	15
		E32-D211/E32-DC200E/E32-D22/E32-D25X/	36	12
		E32-DC200F (F4)		
		E32-D24	15	5
		E32-D25Y/E32-D25Z	10	3.3
		E32-D11/E32-D15XB	90	30
	Break resistant	E32-D21B/E32-D221B	35	10
Break resistant	E32-D21/E32-D22B	15	5	
	E32-D25XB	25	8	
	Fluorine coating	E32-D11U	90	30
'	r idonnio oodiing	E32-D16	40 to 400	55 to 70
	Long distance, high power	E32-D11L		
L			200	65
	Ultracompact, ultrafine sleeve	E32-D21L/E32-D22L	50	17
		E32-D33	10	3.3
		E32-D331	1.5	0.5
		E32-CC200R	75	25
		E32-CC200	150	50
		E32-D32L	80	25
		E32-C31/E32-D32	40	13
		E32-C42 + E39-F3A		f 0.1 to 0.6 mm at 15 mm.
	oaxial, small spot	E32-D32 + E39-F3A	Spot diameter of 0.5 to 1 mm a 6 to 15 mm.	
Special-		E32-C41 + E39-F3A-5	Spot diameter o	f 0.1 mm at 7 mm.
beam		E32-C31 + E39-F3A-5		f 0.5 mm at 7 mm.
models		E32-C41 + E39-F3B		0.2 mm at 17 mm.
		E32-C31 + E39-F3B		0.5 mm at 17 mm.
		E32-C31 + E39-F3C	Spot diameter	of 4 mm max. at 20 mm.
	Area sensing	E32-D36P1	75	25
	Area sensing	E32-R21 + E39-R3 (provided)		to 250
	Retro-reflective			
		E32-R16 + E39-R1 (provided)	150 to 1500	150 to 1000
		E32-L25/E32-L25A		3.3
		E32-L24S		to 4
	Convergent-	E32-L24L		center 4)
	reflective	E32-L25L		center 7.2)
		E32-L86	4 t	o 10
		E32-L16	0 to 15	0 to 13
		E32-D51	120	40
Environ-	Heat resistant	E32-D81R/E32-D61	45	15
ment		E32-D73	30	10
resistive		E32-D12F	50	16
models C	hemical resistant	E32-D14F	20	6.5
		LUC-U 171		0.0

For information on Fiber Units, refer to the E32 Series Fiber Sensor Best Selection (Cat. No. E354).


I/O Circuit Diagrams

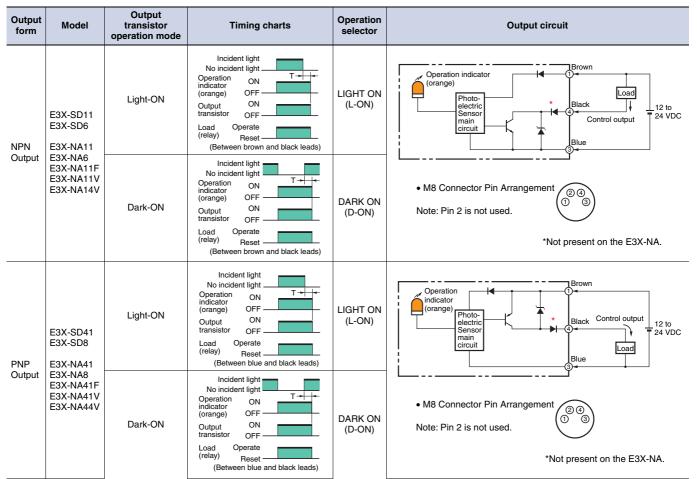

Note: Timing Charts for Timer Settings (T: Set Time)

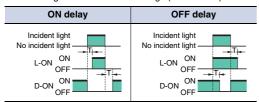

Plug (Sensor I/O Connector)

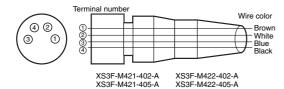


Classification	Wire color	Connection pin	Application
DC	Brown	1	Power supply (+V)
	White	2	
	Blue	3	Power supply (0 V)
	Black	4	Output


Note: Pin 2 is not used.

Nomenclature

Amplifier Units

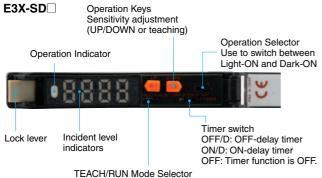

E3X-NA

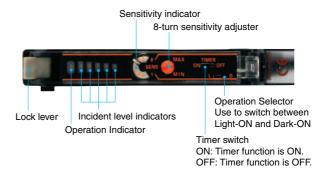

Safety Precautions



Used to select TEACH or RUN mode.

This product is not designed or rated for ensuring safety of persons either directly or indirectly.



Do not use it for such purposes.



Do not exceed the rated voltage. Excess voltage may result in malfunction or fire.



Do not use an AC power supply.
Using an AC power supply may result in rupturing.



High-temperature environments may result in burn injury.



Precautions for Safe Use

The following precautions must be observed to ensure safety.

- 1. Do not use the product in locations where flammable or explosive gas is present.
- 2. Do not use the product in locations subject to splashing water, oil, or chemicals, or in locations subject to steam.
- 3. Do not attempt to disassemble, repair, or modify the product.
- 4. Do not apply voltage or current in excess of the rated ranges.
- 5. Do not use the product in atmospheres or environments that exceed product ratings.
- 6. Do not wire the product incorrectly, such as using incorrect power supply polarity.
- 7. Connect the load properly.
- 8. Do not short-circuit both ends of the load.
- 9. Do not use the product if the case is damaged.
- 10. When disposing of the product, dispose of it as industrial waste.
- 11. Do not use the product in locations subject to direct sunlight.
- 12. The surface temperature of the product may rise as a result of the ambient temperature, power supply, or other usage conditions. Use caution when performing maintenance and washing. Failure to do so may result in burn injury.

Precautions for Correct Use

Do not use the product in atmospheres or environments that exceed product ratings.

Amplifier Units

Designing

Communications Hole

The hole on the side of the Amplifier Unit is a communications hole for preventing mutual interference when Amplifier Units are mounted side-by-side. The E3X-MC11 Mobile Console (order separately) cannot be used.

If an excessive amount of light is received via the Sensor, the mutual interference prevention function may not work. In this case, make the appropriate adjustments using the sensitivity adjuster.


The mutual interference prevention function will not operate when the E3X-SD/NA is used side-by-side with E3X-DA-N models.

Mounting


DIN Track Mounting/Removal

Mounting Amplifier Units

1. Mount the Amplifier Units one at a time onto the DIN track.

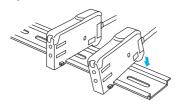

2. Slide the Amplifier Units together, line up the clips, and press the Amplifier Units together until they click into place.

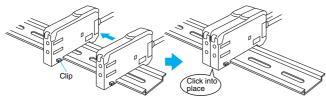

Removing Amplifier Units

Slide Amplifier Units away from each other, and remove from the DIN track one at a time. (Do not attempt to remove Amplifier Units from the DIN track without separating them first.)


- **Note 1.** The specifications for ambient temperature will vary according to the number of Amplifier Units used together. For details, refer to *Ratings and Specifications*.
 - Always turn OFF the power supply before mounting or removing Amplifier Units.

Fiber Connection and Disconnection

The E3X Amplifier Unit has a lock lever. Connect or disconnect the fibers to or from the E3X Amplifier Unit using the following procedures:


1. Connection

Open the Protective Cover, insert the fibers according to the fiber insertion marks on the side of the Amplifier Unit, and lower the lock lever.

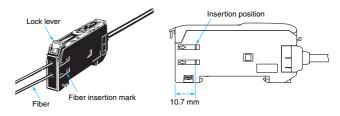

2. Disconnection

Remove the Protective Cover and raise the lock lever to pull out the fiber.

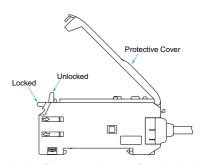

Note:To maintain the fiber properties, confirm that the lock is released before removing the fiber.

3. Precautions for Fiber Connection/Disconnection

Be sure to lock or unlock the lock lever within an ambient temperature range between $-10^{\circ}C$ and $40^{\circ}C.$

Operating Environment

Ambient Conditions

If dust or dirt adhere to the hole for optical communications, it may prevent normal communications. Be sure to remove any dust or dirt before using the Units.

Other

Protective Cover


Be sure to mount the Protective Cover before use.

Amplifier Units with Connectors


Mounting

Mounting Connectors

1. Insert the Master or Slave Connector into the Amplifier Unit until it clicks into place.

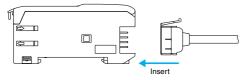


- Join Amplifier Units together as required after all the Master and Slave Connectors have been inserted.
- Attach the stickers (provided as accessories) to the sides of Master and Slave Connectors that are not connected to other Connectors.

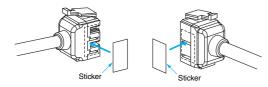

Note: Attach the stickers to the sides with grooves.


Removing Connectors

- 1. Slide the slave Amplifier Unit for which the Connector is to be removed away from the rest of the group.
- After the Amplifier Unit has been separated, press down on the lever on the Connector and remove it. (Do not attempt to remove Connectors without separating them from other Amplifier Units first.)

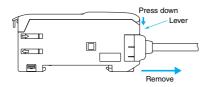


Mounting End Plate (PFP-M)

Depending on how it is mounted, an Amplifier Unit may move during operation. In this case, use an End Plate. Before mounting an End Plate, remove the clip from the master Amplifier Unit using a nipper or similar tool.

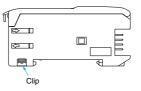


The clip can also be removed using the following mechanism, which is incorporated in the construction of the section underneath the clip.

1. Insert the clip to be removed into the slit underneath the clip on another Amplifier Unit.

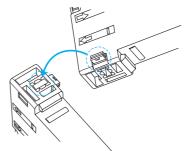


2. Remove the clip by rotating the Amplifier Unit.

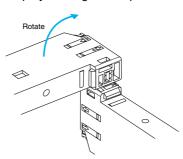

Pull Strengths for Connectors (Including Cables)

E3X-CN11: 30 N max. E3X-CN12: 12 N max. Dimensions (Unit: mm)

Amplifier Units

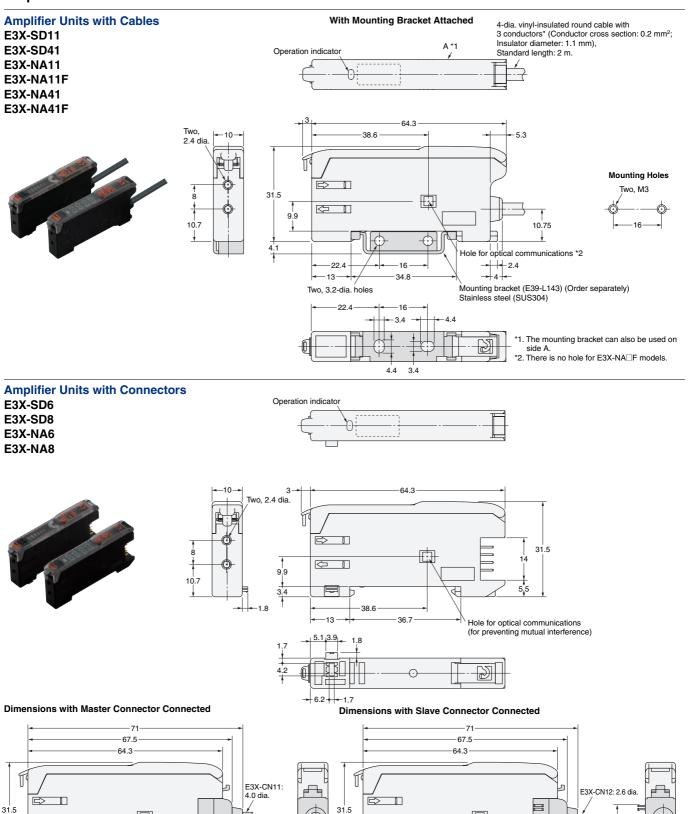

1.5


1.8 5.1 3.9

12.95


H

1.8 5.1 3.9

H

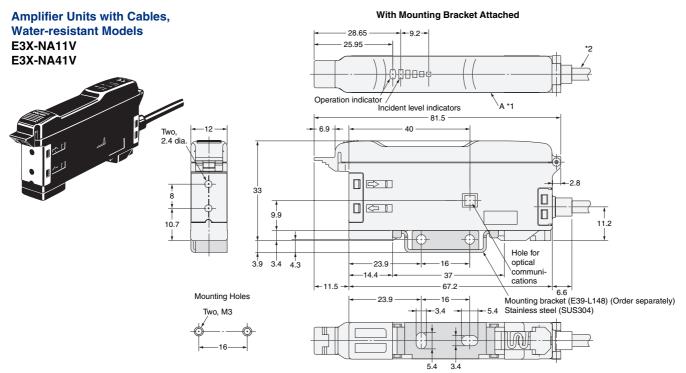


*1. The mounting bracket can also be used on side A.
*2. 4-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.45 mm², Insulator diameter: 1.1 mm), Standard length: 2 m.

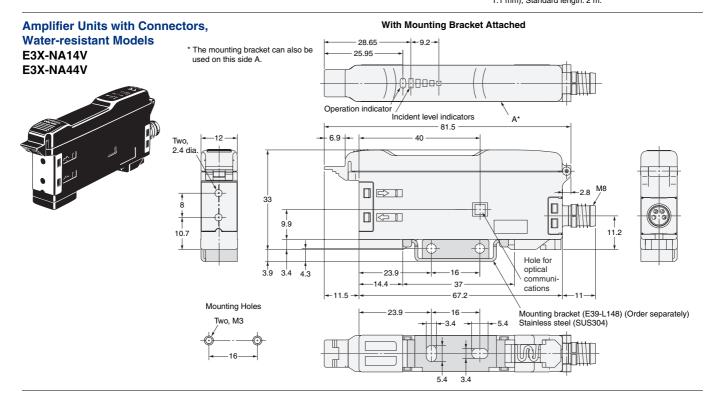

Amplifier Unit Connectors

Master Connector E3X-CN11




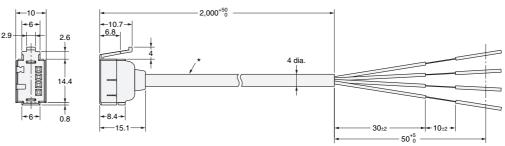

*E3X-CN11: 2.6-dia. vinyl-insulated round cable with 3 conductors (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm)

Slave Connector E3X-CN12



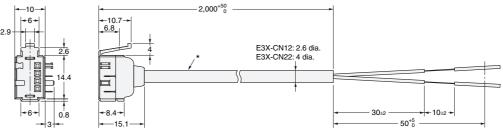


*E3X-CN12: 2.6-dia. vinyl-insulated round cable with 1 conductor (Conductor cross section: 0.2 mm², Insulator diameter: 1.1 mm)

Accessories (Order Separately)

Mounting Brackets E39-L143





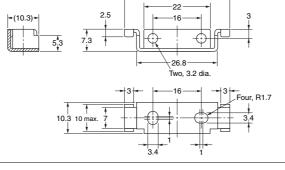





Material: Stainless steel (SUS304)

End Plates PFP-M



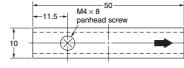

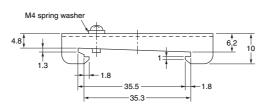

For information on Fiber Units, refer to the E32 Series Fiber Sensor Best Selection (Cat. No. E354).

Operating Procedure

E3X-SD

1 Displays

A 7-segment display showing excess gain is provided in addition to the orange operation indicator.

Use these when adjusting the light axis and setting the sensitivity at setup.

Display/indicator status (for L/ON)	Excess gain	Description
Operation indicator Excess gain display	999% (10 times)	110% min. Stable incident light
8888	100%	90% to 110% Unstable incident light or Unstable interrupted light
•8888	0%	90% max. Stable interrupted light

2 Sensitivity Setting

The sensitivity can be set with the UP and DOWN Keys similar to using an adjuster knob. The sensitivity can also be easily set by using the following three teaching functions.

2-1. Maximum Sensitivity Setting

The sensitivity can be set to the maximum. This is the optimal setting for resistance against the effects of dust.

Operation description	Switch/Key	Display
Set the TEACH/RUN selector switch to TEACH.	TEACH RUN	0 <u>EEch</u> ◆► 0 (039
Press the UP Key for 3 s min.	UP	OFUL
Set the TEACH/RUN selector switch to RUN (start of measurement).	TEACH RUN	0 run > 0 1837

2-2. Teaching with/without a Workpiece

Two points (one with the workpiece and the other without) are detected, and the operating level is set to the midpoint.

Operation description	Switch/Key	Display
Set the TEACH/RUN selector switch to TEACH.	TEACH RUN	0 <u>E c h</u> ◆ 0 (0 3 P
Press the UP Key with the workpiece present.	UP	0
Press the UP Key with the workpiece not present.	UP	ogpat
Set the TEACH/RUN selector switch to RUN (start of measurement).	TEACH RUN	0 run > 0 (03P

2-3. Automatic Teaching

Changes within a time are detected, and the operating level is set to the midpoint between the maximum and the minimum values of the changes. This setting is optimal for when the workpieces cannot be stopped.

Operation description	Switch/Key	Display
Set the TEACH/RUN selector switch to TEACH.	TEACH RUN	0 <u>EEch</u> <> 0 (03)
Press the UP Key.	UP	0

Ope	ration description	Switch/Key	Display
detection	vn the UP Key during n. Let the workpiece le the key is held down.	UP	ORUEO
	EACH/RUN selector RUN (start of mea- t).	TEACH RUN	0 run > 0 (037

E3X-NA□

1 Displays

A bar display (with four green and one red) showing excess gain is provided in addition to the orange operation indicator. Use these when adjusting the light axis and setting the sensitivity at setup.

Display/indicator status (for L/ON)	Excess gain level	Description	
Operation indicator Excess gain level display	Approx. 120% min.	Stable incident	
	Approx. 110% to 120%		
	Approx. 90% to 110%	Unstable incident light or Unstable interrupted light	
	Approx. 80% to 90%	Stable	
	Approx. 80% max.	interrupted light	

READ AND UNDERSTAND THIS DOCUMENT

Please read and understand this document before using the products. Please consult your OMRON representative if you have any questions or comments

WARRANTY

OMRON's exclusive warranty is that the products are free from defects in materials and workmanship for a period of one year (or other period if specified) from date of sale by OMRON.

OMRON MAKES NO WARRANTY OR REPRESENTATION, EXPRESS OR IMPLIED, REGARDING NON-INFRINGEMENT, MERCHANTABILITY, OR FITNESS FOR PARTICULAR PURPOSE OF THE PRODUCTS. ANY BUYER OR USER ACKNOWLEDGES THAT THE BUYER OR USER ALONE HAS DETERMINED THAT THE PRODUCTS WILL SUITABLY MEET THE REQUIREMENTS OF THEIR INTENDED USE. OMRON DISCLAIMS ALL OTHER WARRANTIES, EXPRESS OR IMPLIED.

LIMITATIONS OF LIABILITY

OMRON SHALL NOT BE RESPONSIBLE FOR SPECIAL, INDIRECT, OR CONSEQUENTIAL DAMAGES, LOSS OF PROFITS OR COMMERCIAL LOSS IN ANY WAY CONNECTED WITH THE PRODUCTS, WHETHER SUCH CLAIM IS BASED ON CONTRACT, WARRANTY, NEGLIGENCE, OR STRICT LIABILITY.

In no event shall responsibility of OMRON for any act exceed the individual price of the product on which liability is asserted.

IN NO EVENT SHALL OMRON BE RESPONSIBLE FOR WARRANTY, REPAIR, OR OTHER CLAIMS REGARDING THE PRODUCTS UNLESS OMRON'S ANALYSIS CONFIRMS THAT THE PRODUCTS WERE PROPERLY HANDLED, STORED, INSTALLED, AND MAINTAINED AND NOT SUBJECT TO CONTAMINATION, ABUSE, MISUSE, OR INAPPROPRIATE MODIFICATION OR REPAIR.

SUITABILITY FOR USE

THE PRODUCTS CONTAINED IN THIS DOCUMENT ARE NOT SAFETY RATED. THEY ARE NOT DESIGNED OR RATED FOR ENSURING SAFETY OF PERSONS, AND SHOULD NOT BE RELIED UPON AS A SAFETY COMPONENT OR PROTECTIVE DEVICE FOR SUCH PURPOSES. Please refer to separate catalogs for OMRON's safety rated products.

OMRON shall not be responsible for conformity with any standards, codes, or regulations that apply to the combination of products in the customer's application or use of the product.

At the customer's request, OMRON will provide applicable third party certification documents identifying ratings and limitations of use that apply to the products. This information by itself is not sufficient for a complete determination of the suitability of the products in combination with the end product, machine, system, or other application or use.

The following are some examples of applications for which particular attention must be given. This is not intended to be an exhaustive list of all possible uses of the products, nor is it intended to imply that the uses listed may be suitable for the products:

- Outdoor use, uses involving potential chemical contamination or electrical interference, or conditions or uses not described in this document.
- Nuclear energy control systems, combustion systems, railroad systems, aviation systems, medical equipment, amusement machines, vehicles, safety equipment, and installations subject to separate industry or government regulations.
- Systems, machines, and equipment that could present a risk to life or property.

Please know and observe all prohibitions of use applicable to the products.

NEVER USE THE PRODUCTS FOR AN APPLICATION INVOLVING SERIOUS RISK TO LIFE OR PROPERTY WITHOUT ENSURING THAT THE SYSTEM AS A WHOLE HAS BEEN DESIGNED TO ADDRESS THE RISKS, AND THAT THE OMRON PRODUCT IS PROPERLY RATED AND INSTALLED FOR THE INTENDED USE WITHIN THE OVERALL EQUIPMENT OR SYSTEM.

PERFORMANCE DATA

Performance data given in this document is provided as a guide for the user in determining suitability and does not constitute a warranty. It may represent the result of OMRON's test conditions, and the users must correlate it to actual application requirements. Actual performance is subject to the OMRON Warranty and Limitations of Liability.

CHANGE IN SPECIFICATIONS

Product specifications and accessories may be changed at any time based on improvements and other reasons.

It is our practice to change model numbers when published ratings or features are changed, or when significant construction changes are made. However, some specifications of the product may be changed without any notice. When in doubt, special model numbers may be assigned to fix or establish key specifications for your application on your request. Please consult with your OMRON representative at any time to confirm actual specifications of purchased products.

DIMENSIONS AND WEIGHTS

Dimensions and weights are nominal and are not to be used for manufacturing purposes, even when tolerances are shown.

ERRORS AND OMISSIONS

The information in this document has been carefully checked and is believed to be accurate; however, no responsibility is assumed for clerical, typographical, or proofreading errors, or omissions.

PROGRAMMABLE PRODUCTS

OMRON shall not be responsible for the user's programming of a programmable product, or any consequence thereof.

COPYRIGHT AND COPY PERMISSION

This document shall not be copied for sales or promotions without permission.

This document is protected by copyright and is intended solely for use in conjunction with the product. Please notify us before copying or reproducing this document in any manner, for any other purpose. If copying or transmitting this document to another, please copy or transmit it in its entirety.

This document provides information mainly for selecting suitable models. Please read the Instruction sheet carefully for information that the user must understand and accept before purchase, including information on warranty, limitations of liability, and precautions.

OMRON Corporation Industrial Automation Company

Sensing Devices Division H.Q. Industrial Sensors Division Shiokoji Horikawa, Shimogyo-ku, Kyoto, 600-8530 Japan Tel: (81)75-344-7022/Fax: (81)75-344-7107

Regional Headquarters

OMRON EUROPE B.V.
 Sensor Business Unit,
 Room 2211, Bank of China Tower,

 Carl-Benz-Str. 4 D-71154 Nufringen,
 200 Yin Cheng Zhong Road,

 Germany
 Pu Dong New Area, Shanghai, 200120, China

 Tel: (49) 7032-811-0/Fax: (49) 7032-811-199
 Tel: (86) 21-5037-2222/Fax: (86) 21-5037-2220
 Note: Specifications subject to change without notice.

OMRON ELECTRONICS LLC

One Commerce Drive Schaumburg, IL 60173-5302 U.S.A. Tel: (1) 847-843-7900/Fax: (1) 847-843-7787

OMRON ASIA PACIFIC PTE. LTD. No. 438A Alexandra Road # 05-05/08 (Lobby 2), Alexandra Technopark, Singapore 119967 Tel: (65) 6835-3011/Fax: (65) 6835-2711 83 Clemenceau Avenue,

OMRON (CHINA) CO., LTD.

Authorized Distributor:

Cat. No. E388-E1-01

Cat. No. E388-E1-01